



Marley
Engineered Products

HIGH VELOCITY AIR CIRCULATOR INSTRUCTIONS (BOLT UP MODELS)

READ AND SAVE THESE IMPORTANT INSTRUCTIONS

Your High Velocity Air Circulator has been designed and manufactured using the latest in technology. With normal care and use it should provide many years of satisfactory performance. As with all small appliances, it is recommended that you note the following:

- ALWAYS unplug unit for cleaning.
- ALWAYS unplug unit when not in use.
- ALWAYS unplug when moving fan from one location to another.
- DO NOT use an extension cord. Plug unit directly into an electrical outlet of the correct voltage.
- DO NOT place foreign objects through guard into blade.
- DO NOT allow to become wet or damp.
- WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid state speed control device.

INSTALLATION INSTRUCTIONS

For installation on wood structures, use a 1/2" lag screw of appropriate length for the application. Place flat washers on both sides of the yoke for smooth rotation.

For installation on steel structures, use a 1/2" bolt of appropriate length for the application, in combination with a flat washer, lock washer and 1/2" nut. Place flat washers on both sides of the yoke for smooth rotation.

For installation on masonry structures, use a 1/2" lag screw, in combination with a lag screw shield, of appropriate length for the application. Place flat washers on both sides of the yoke for smooth rotation.

OPERATING INSTRUCTIONS

Your high quality fan features a three (3) speed air flow selector switch which allows you to select the amount of air velocity.

It is normal for the motor to feel warm to the touch during operation. The motor is thermally protected and will automatically shut off should it overheat for any reason. If this happens, immediately disconnect the fan from the power outlet.

The motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

CLEANING INSTRUCTIONS

Use a screwdriver and start prying the front guard up and away from the rear guard on the back, top side of the fan. Repeat this procedure on the left or right side of the fan. The front guard will then pull away easily.

Use a mild detergent to clean the blade and guards. When replacing the front guard, use the same prying procedure to snap it back into place.

LIMITED WARRANTY

Dear Customer,

Thank you for your interest in Marley Engineered Products products. We're sure you will enjoy its benefits for many years to come. Please take a minute to fill out the following information and keep it in your permanent records.

Date Purchased _____ Date Installed _____

Model Number _____

LIMITED WARRANTY

This product by Marley Engineered Products is warranted to be free defects in material and workmanship for 12 months from date of original purchase.

There is no other warranty, express or implied, except such as is expressly set forth herein.

Seller will not be liable for any general, consequential, or incidental damages, including without limitation any damage for loss of use or loss of profits, for any breach of warranty or for negligence. Seller's liability and buyer's exclusive remedy are limited to the repair of defective goods or the shipment of equivalent goods, or the granting of a reasonable allowance on account of any defects as the seller may elect.

To obtain performance under this warranty, you must:

1. Contact the Marley Engineered Products Service Department at 1-800-642 HEAT between the hours of 8:30 a.m. and 4:30 p.m. E.S.T. Mon. thru Fri.
2. Provide the model number of the product, the date of installation, and state the nature of the difficulty being experienced.

3. The Marley Engineered Products Service Representative will determine the best way to resolve the difficulty.

Products within warranty which have been installed and returned to the seller for repair will be repaired and returned as used products. Repairs to products outside the warranty period will be subject to labor and parts charges.

Some states have enacted legislation which (a) does not allow the inclusion of limitations on incidental or consequential damages; (b) does not allow limitations on the length of a warranty period; (c) precludes exclusion, during the period of a limited warranty, of any implied warranties of merchantability or fitness for purpose.

To the extent of such provisions being applicable in your state, the limitations in this warranty may not apply.

TO ENSURE SAFE OPERATION

Be sure that operating instructions (packaged with the product) are followed and that moving parts are kept clean and free from obstructions.

Any warranties granted or liabilities assumed hereunder will not apply to goods that have been damaged in transit, altered, repaired, installed or operated otherwise than in conformity with the above requirements for safe operation.

HOW TO ORDER REPAIR PARTS

In order to obtain any needed repair or replacement parts, warranty service or technical information, please contact Marley Engineered Products Service Center toll-free by calling 1-800-642-HEAT.

When ordering repair parts, always give the information listed as follows:

1. The Part Number
2. The Model Number
3. The Part Description
4. Date of Manufacture



SPX Corporation
470 Beauty Spot Rd. East
Bennettsville, SC 29512 USA