

## **MEP-RC-RG**

**Roof Clip Kit** 

## Installation, Operation & Maintenance Instructions

**Tools Required:** Screw Driver **Kit Contents:** 25 Roof Clips



IMPORTANT INSTRUCTIONS		
1	Spacing:	Height: Heater should extent high enough up the roof to extend over the heated part of the building
2		Use weatherproof caulk under clip and screw head.
3	Site	Form drip loop at roof edge, using two roof clips as shown.
4	THE	

## SAVE THESE INSTRUCTIONS